



CE870 System Printer Repackaging

i The printer activation code is required before proceeding. If this code is unavailable, contact Datacard Customer Support at 1-800-328-3996 with the printer serial number to obtain the code.


1. Disable the printer.
 - A. Press and hold the user button on the printer until **Suspended Menu Available** displays on the LCD panel, and then press the enter key to enter the Main menu.

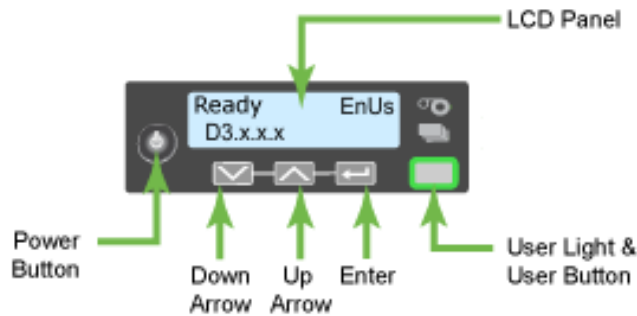

- B. Press the down arrow key until **Activate** displays on line 2 of the LCD panel.
 - C. Press the enter key to enter the **Activate** menu.

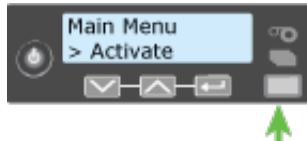

- D. Press the down key until **Disable** displays on line 2 of the LCD panel.
 - E. Press the enter key to enter the **Disable** menu.

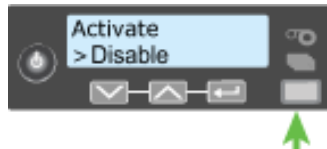


- F. Enter the code used to activate the system.



- G. Press the up and down arrow keys to cycle through the alpha and numeric characters. Press enter to select each character that matches the 8-digit numeric code. When **Request Success** displays on line 2 of the LCD panel, the system is inactivated.
 - H. Press and hold the power button to shut down the power to the system.


2. Prepare the printer.

A. Remove the power cord to the printer.

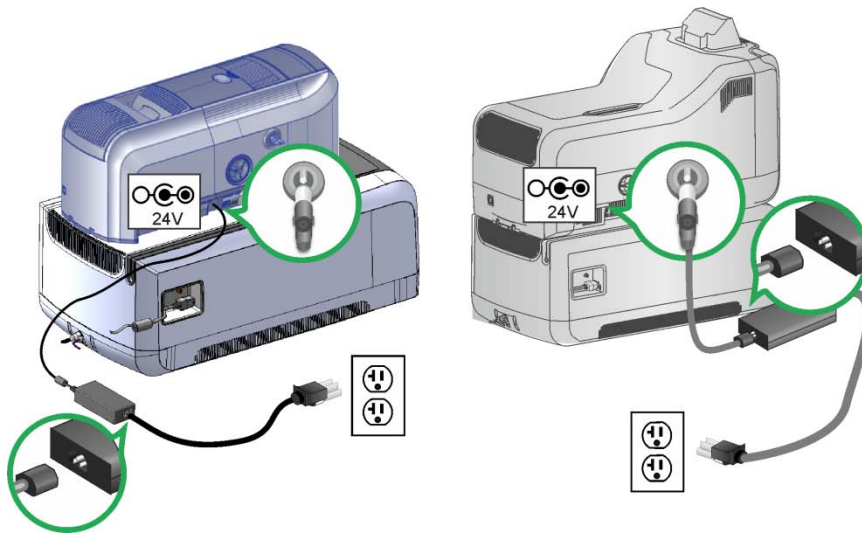

i Note: Do not repack the power cable or any other accessories with the unit.


B. Disconnect the data link and network cables to the printer.

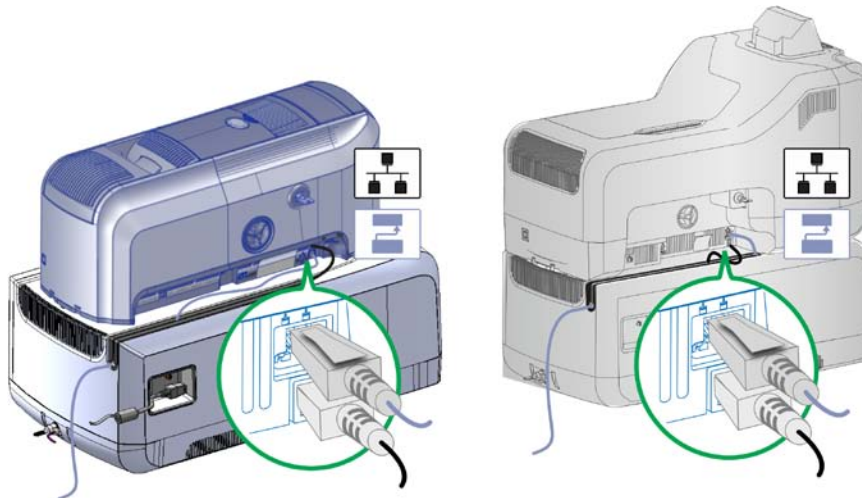

C. Unlock and open the printer and embosser.

D. Open the hopper and remove any unused card stock.


3. Secure internal components (multi-hopper only).
 - A. Place the original shipping restraint into the body of the printer.
 - B. Secure the shipping restraint behind the multi-hopper.

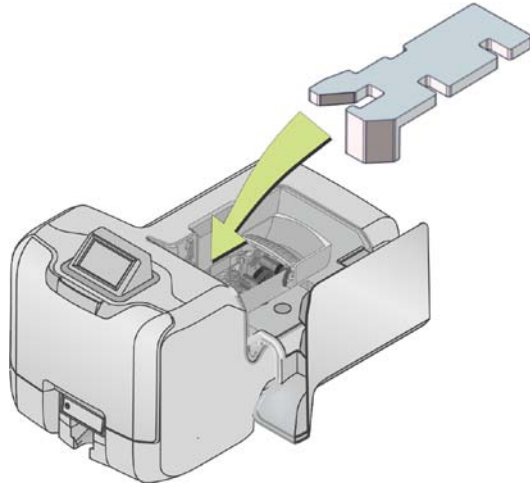

4. Close and lock the printer.

i Do not repackage the key with the unit.


5. Remove printer.
 - A. Pull out the handle inside the embosser to unlock the printer mounted above.
 - B. Lift the printer up and off the embosser.

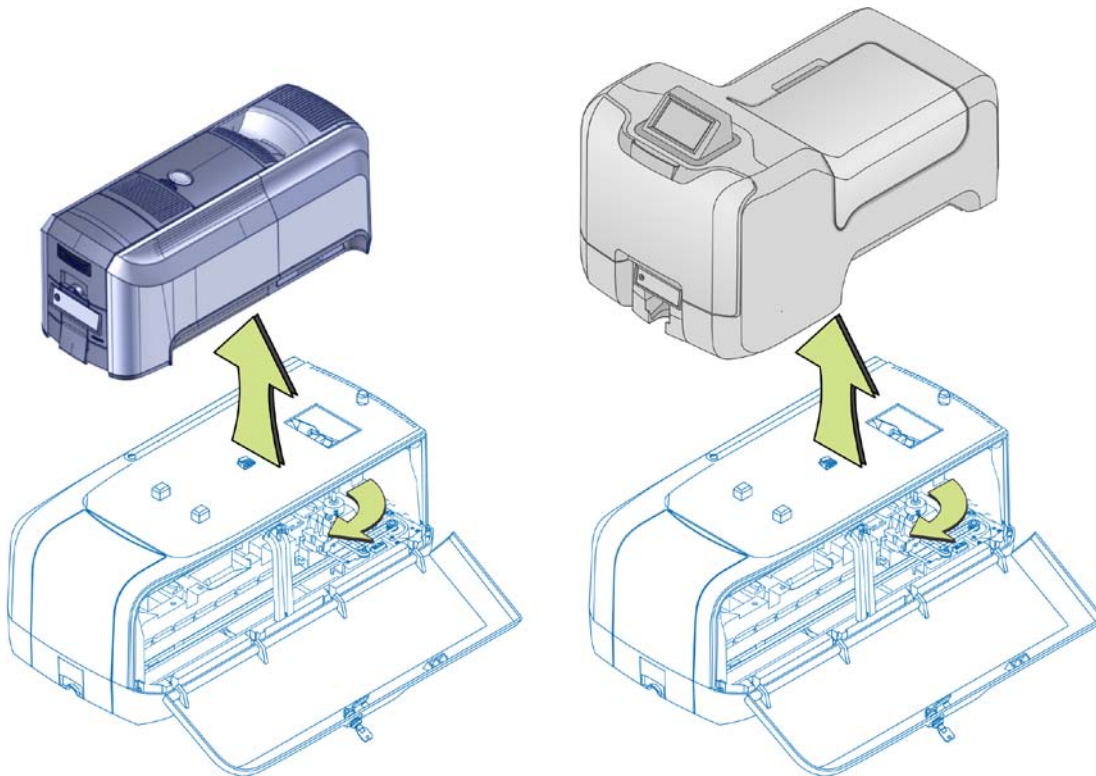

6. Box the printer for shipping.


Single-hopper printer only:

- A. Secure the printer into the foam inserts above and below and at both ends of the unit.
- B. Place the printer with foam inserts into the box and place the cardboard insert above.
- C. Wrap shipping tape around the box and cover to secure the container for shipping.

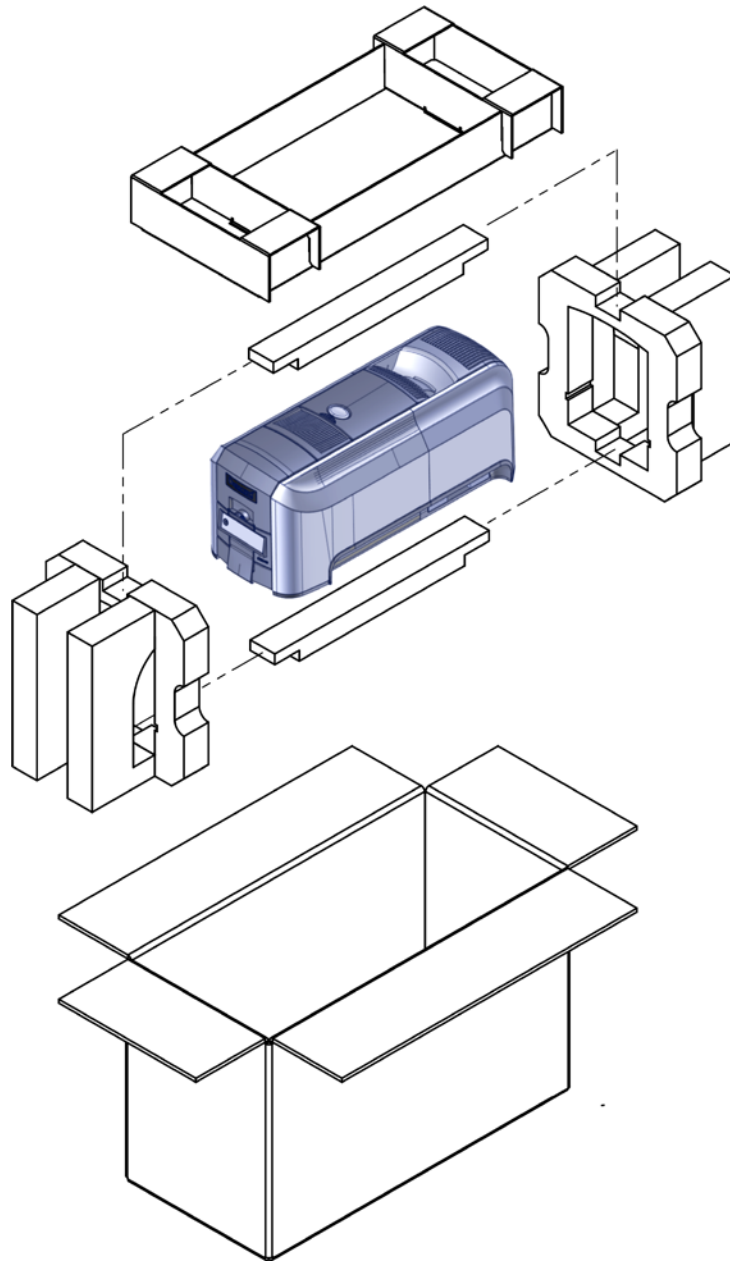

Multi-hopper printer only:


- A. Secure the printer into the foam inserts at both ends of the unit.
- B. Center the unit with inserts on the unfolded box.

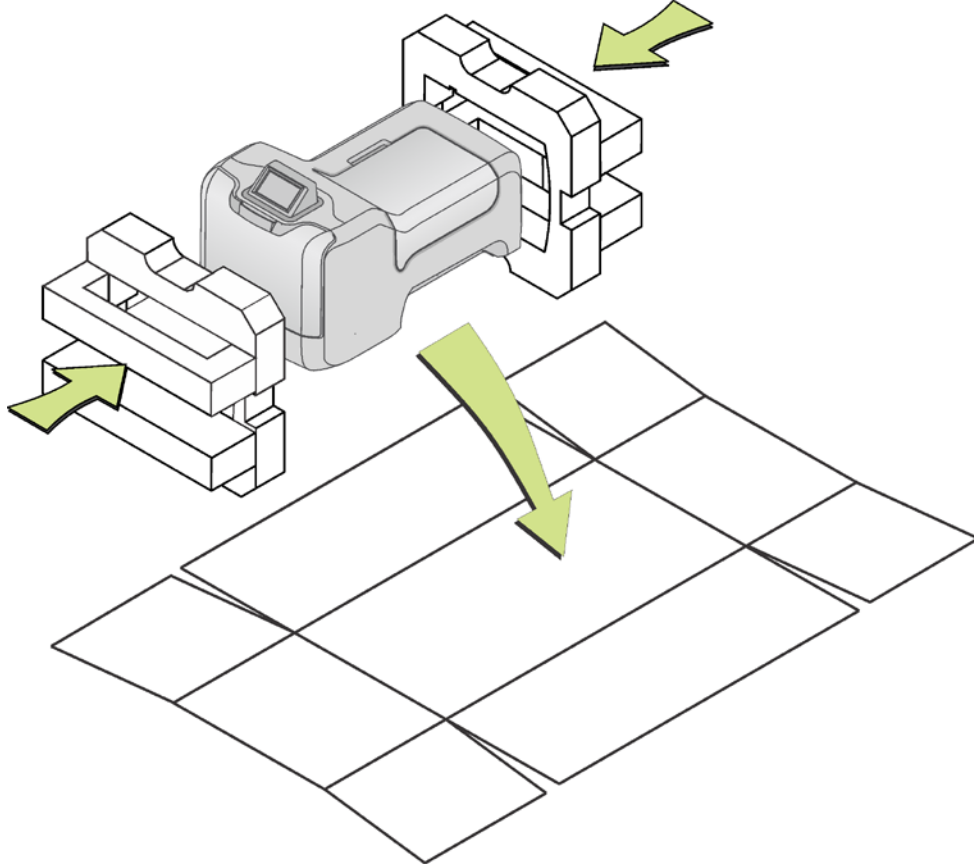


Use the unit's original box with the bar-coded configuration label on the outside. If the original packaging is unavailable, order a replacement by contacting Datacard Customer Support at 1-800-328-3996 or email North_America_Cust_Serv@datacard.com.



- C. Fold the box around the unit with inserts.
- D. Secure the folding of the box using the 4 "T" tabs.
- E. Place the cover on top of the box.

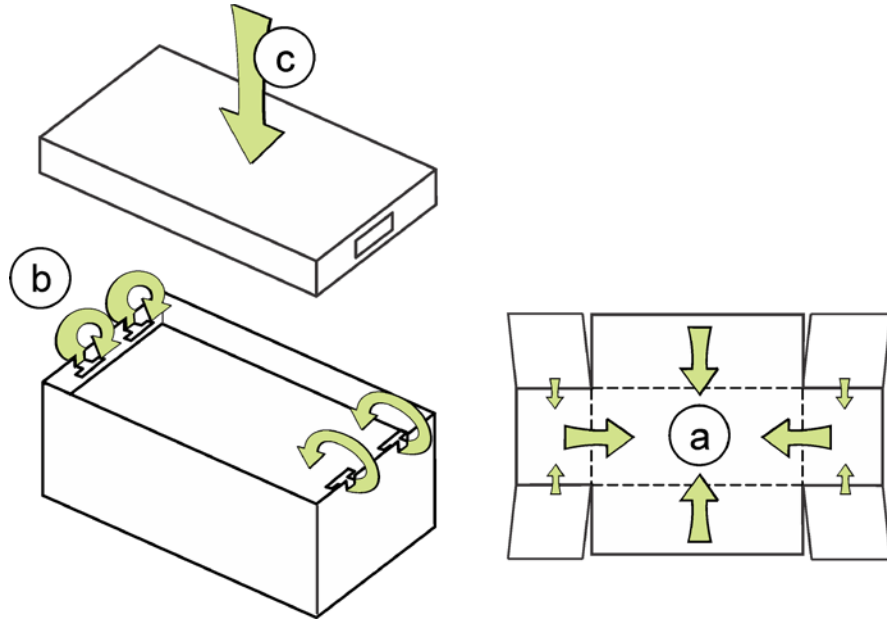

- F. Insert and close the two plastic handles to secure the cover to the box.

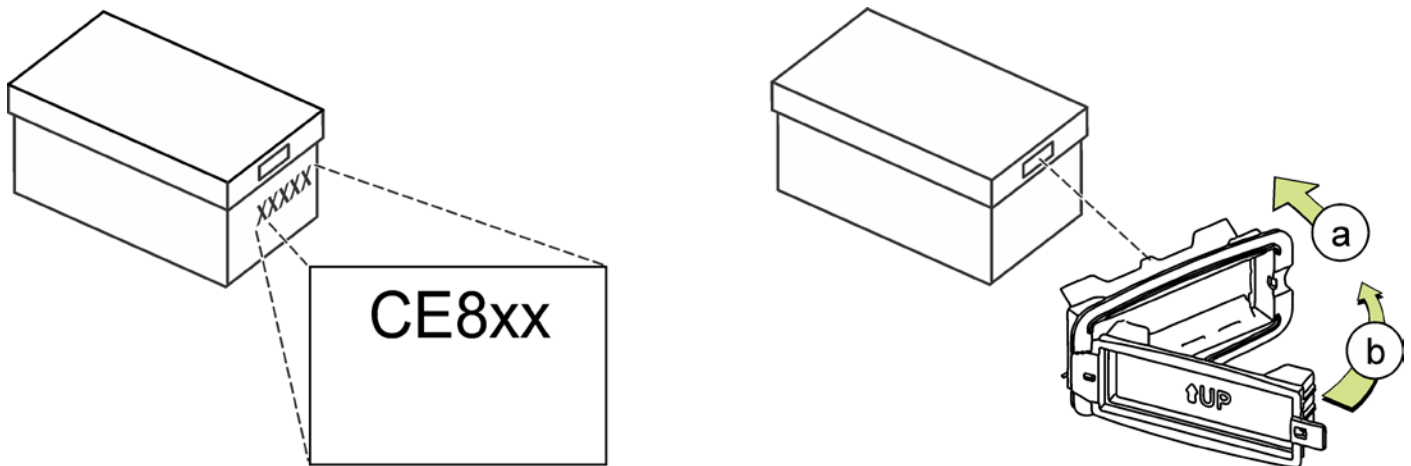

- G. Wrap shipping tape around the box and cover to secure the container for shipping.