 




ES Printer Repackaging for Shipment

 
 
Use the following procedures to prepare the Entrust ES1 or ES2 Direct to Card Printer for shipment.

1. Press the power button to power off the printer.

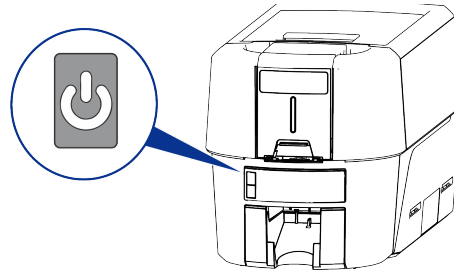


Caution: Wait until all the lights on the front panel are off to make sure that the printer power is off.


2. Remove all optional components of the printer. Refer to the components repackaging instructions for details on competent removal.
3. Disconnect the network or USB cable (the cable is not required for shipment).

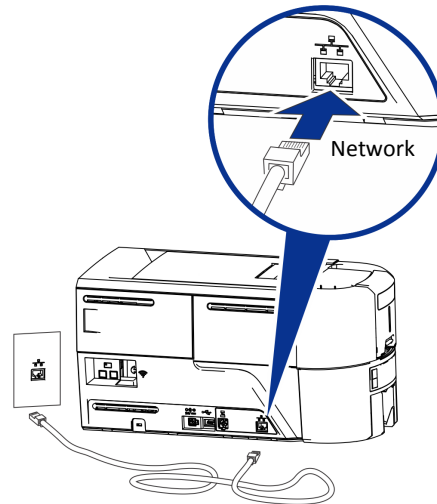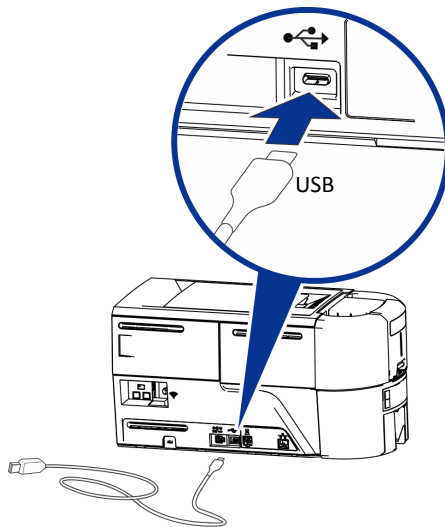

 
4. Unplug the power cord from the printer (the cord is not required for shipment).

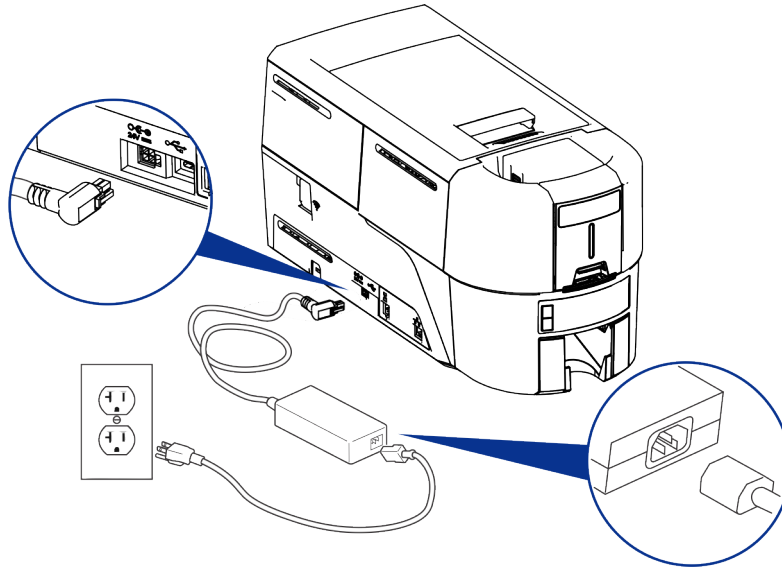

 5. Remove the printer supplies.
 - a. Unlock (if required) the printer and open the printer swingarm.
 - b. Remove the supply cartridge (the cartridge is not required for shipment).
 - c. Close the swingarm and lock the printer (if required).

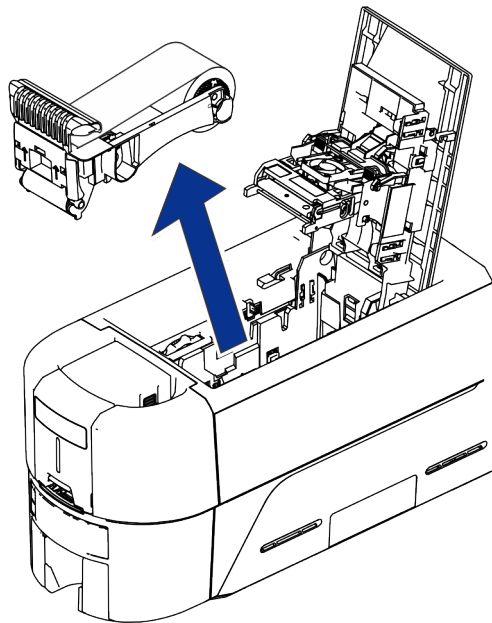


 - d. Unlock (if required) the hopper and open the hopper door.
- e. Remove any unused cards from the hopper.
- f. Close the hopper door and lock the hopper (if required).

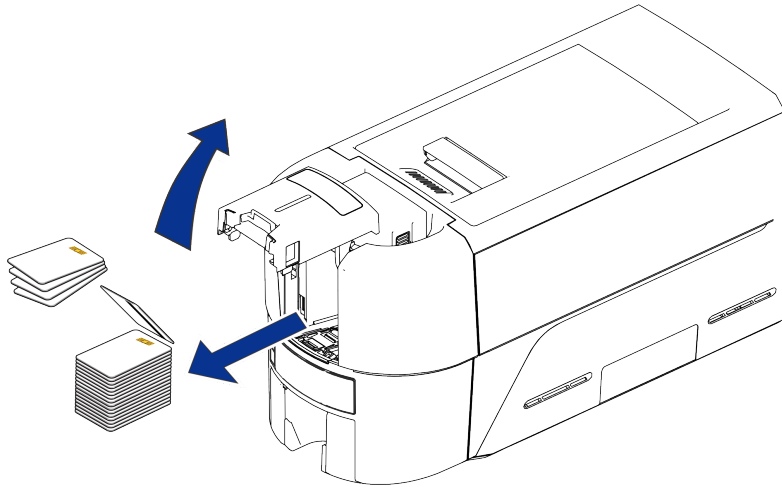


6. Pack the printer.

 - a. Place the printer on the folding container and close the sides of the container.

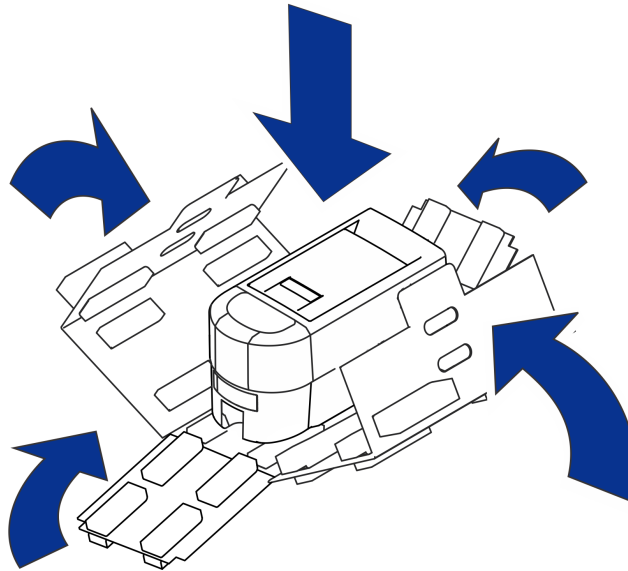

 - b. Lift the folding container using the handle cut outs and place the container in the box.
- c. Place the accessories tray in the box.

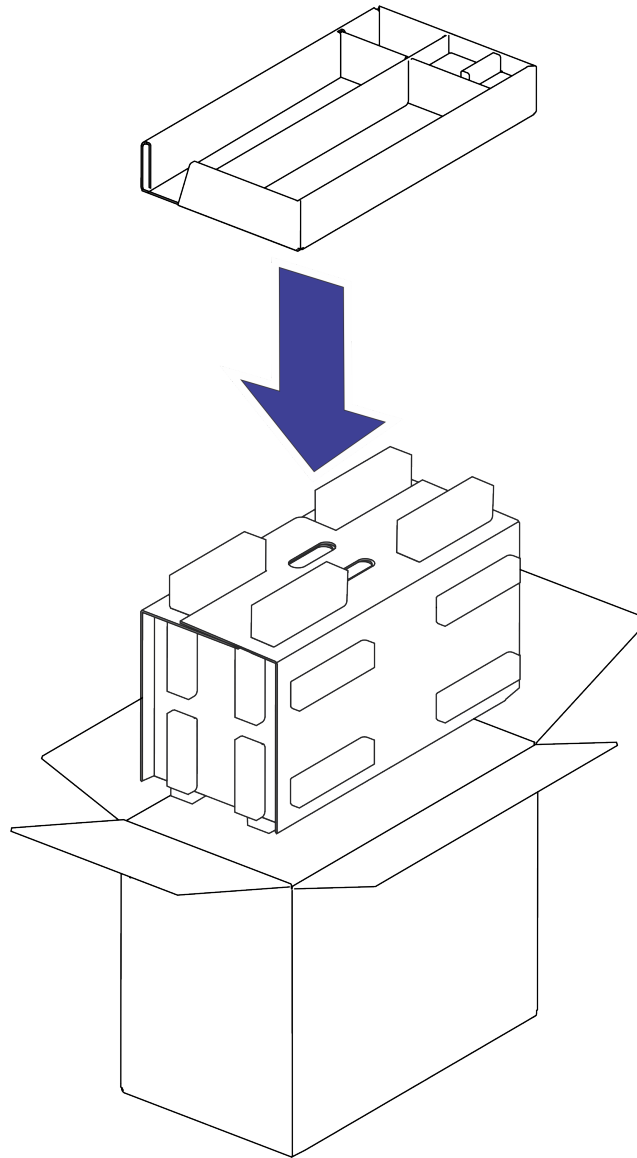

- d. Close and secure the box with shipping tape.